


Instructions for the fixing of Bow Numbers

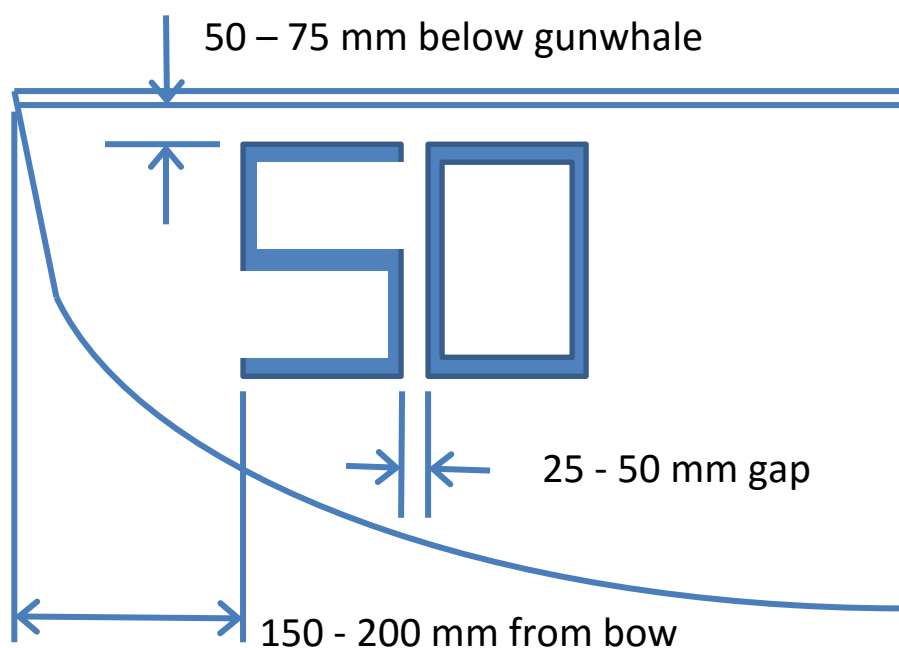

Bow numbers shall be fixed to both sides of the bow as illustrated. If a bow number becomes lost or damaged so that in the opinion of the Race Committee it is unclear or unreadable it must be replaced before the first race of the following day. Numbers used must be from digital 8s, 24 cm (10") in height.


Numbers should be positioned:

- * Within the first 600mm of the hull;
- * 150-200mm from the bow
- * 50-75mm below the gunwale
- * top edge parallel to the gunwale
- * 25-50mm gap between digits.

It is usually easiest to use one of the offcuts from the digital 8 as a spacer.

Numbers are allocated by the Class, usually to the Helm. Provided you sail at a minimum of 1 class major event each year, the number will remain with you whilst you remain a member of the class. If you do not have a bow number, please contact the Results Officer.

Instructions for the fixing of Bow Numbers

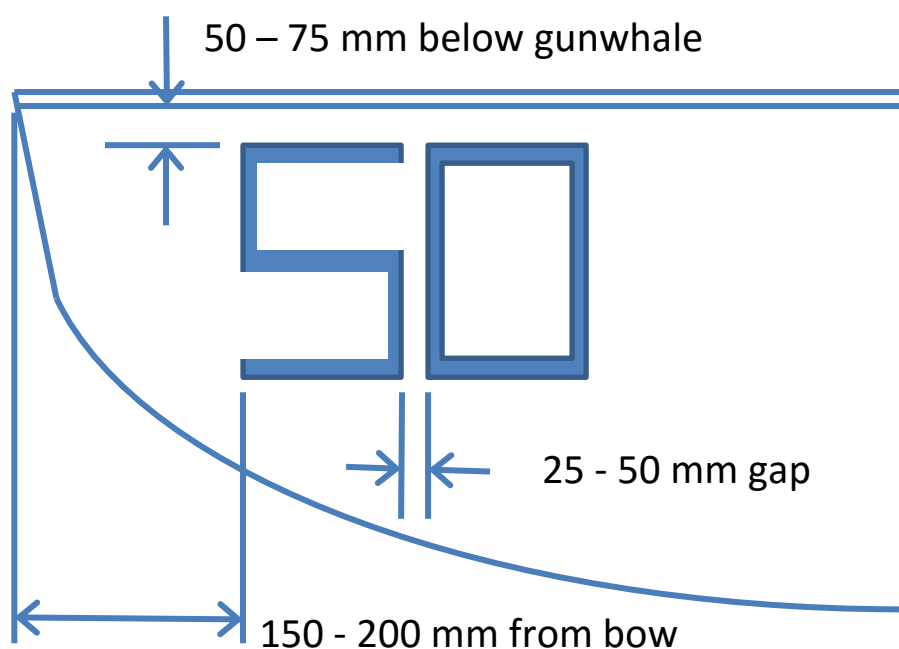

Bow numbers shall be fixed to both sides of the bow as illustrated. If a bow number becomes lost or damaged so that in the opinion of the Race Committee it is unclear or unreadable it must be replaced before the first race of the following day. Numbers used must be from digital 8s, 24 cm (10") in height.

Numbers should be positioned:

- * Within the first 600mm of the hull;
- * 150-200mm from the bow
- * 50-75mm below the gunwale
- * top edge parallel to the gunwale
- * 25-50mm gap between digits.

It is usually easiest to use one of the offcuts from the digital 8 as a spacer.

Numbers are allocated by the Class, usually to the Helm. Provided you sail at a minimum of 1 class major event each year, the number will remain with you whilst you remain a member of the class. If you do not have a bow number, please contact the Results Officer.